

## Handset functions & what to do in case of an error:

---

### Button functionality RISE

Nr.	Function	Required action
1	Going up	Press <b>Up</b> button
2	Going down	Press <b>Down</b> button
3a	Reset system	<ol style="list-style-type: none"><li>1. Move system to lowest position.</li><li>2. Press <b>Down</b> button <b>10 sec.</b></li><li>3. Press <b>Down</b> button again to finish action.<ol style="list-style-type: none"><li>a. Feedback: System goes to its lowest position and 7 mm up.</li></ol></li></ol>
3b	Hard System Reset	<ol style="list-style-type: none"><li>1. Unplug power cable, wait for 30+ seconds and plug in the power cable.</li><li>2. Move system to lowest position.</li><li>3. Press <b>Down</b> button <b>10 sec.</b></li><li>4. Press <b>Down</b> button again to finish action.<ol style="list-style-type: none"><li>a. Feedback: System goes to its lowest position and 7 mm up.</li></ol></li></ol>
4a	Unlock child lock	Press <b>Up</b> and <b>Down</b> button <b>2 seconds</b> simultaneously Feedback: System goes up and down 7 mm.
4b	Lock child lock	System automatically locks 5 minutes after the last interaction.
5	Disable/enable child lock feature	Press <b>Up</b> and <b>Down</b> button <b>20 seconds</b> simultaneously Feedback: System goes up and down 7 mm twice.


---

### Not working system guide:

- 1 Check whether all cables are still connected (power cable, handset cable, gyroscope cable, etc.)
- 2 Check whether the system obstructed by an object (for example: a desk)
- 3 Check if the system's child lock is unlocked. Not sure? Unlock the system.
- 4 If there is no object obstructing the lift, run a system reset.
- 5 If a System Reset, doesn't solve it, try to run a Hard System Reset.


### 1. Open top cover

Open the top cover, (using a screwdriver could be useful).  
After opening you can pull it up.

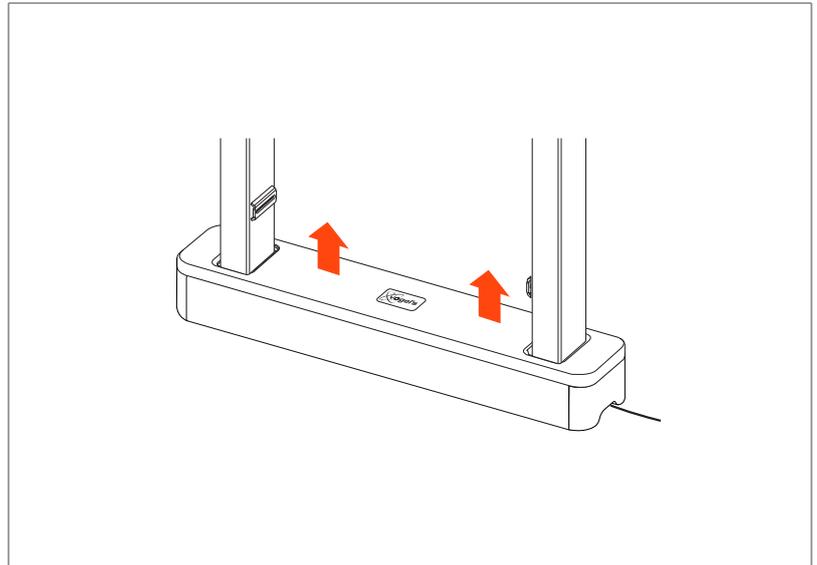


### 2. Plug in cable

Plug the RISE A151 Programmer cable into the controlbox, using the outer right slot.

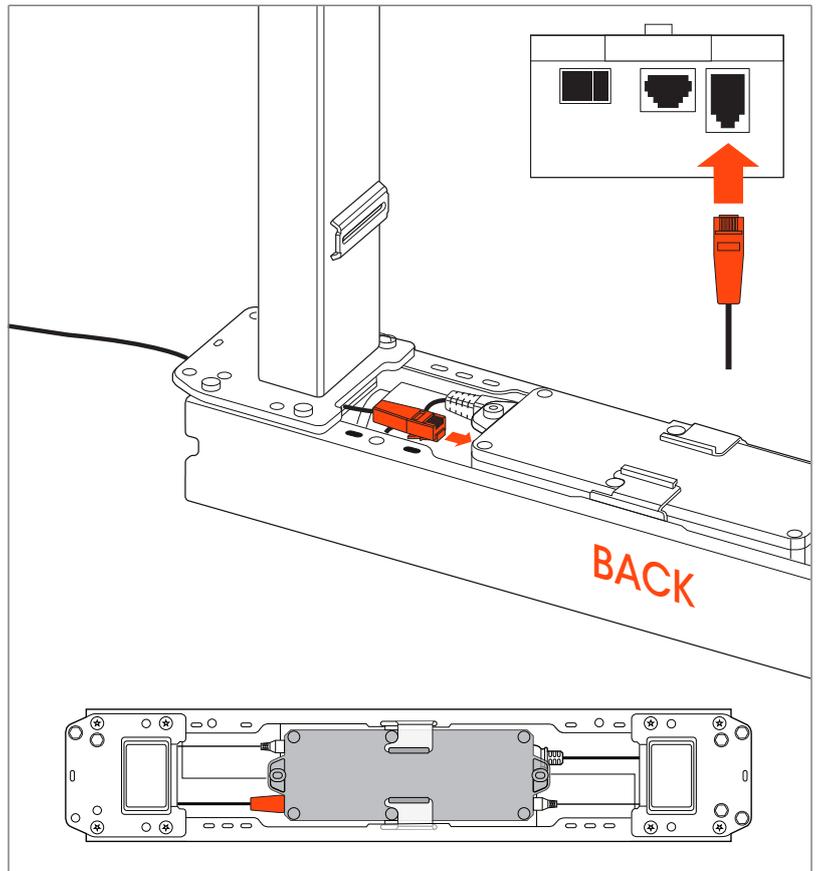


### 3. Connect to PC

- 3a: Connect to PC
- Select port
  - Press Connect
- 3b: Fill in password
- 0000

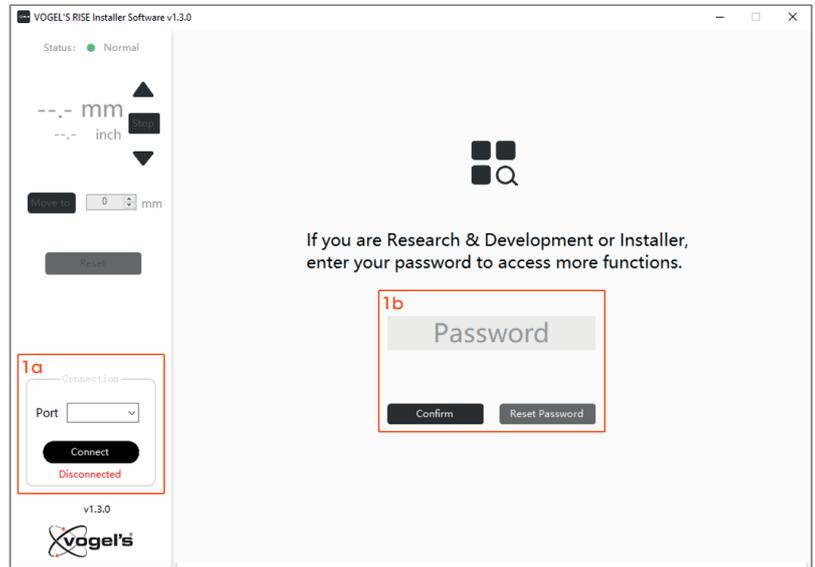


### 4. Left window

- 4a: Status of system:  
Normal, reset or Error code (E...)
- 4b:
- Displayed current height
  - Arrows:  
To move system up or down
  - Move to:  
- Set height  
- Press 'Move to' to go to the predefined position
  - Stop: Stop movement (only needed in case of set 'move to')
- 4c: Press and hold to reset system

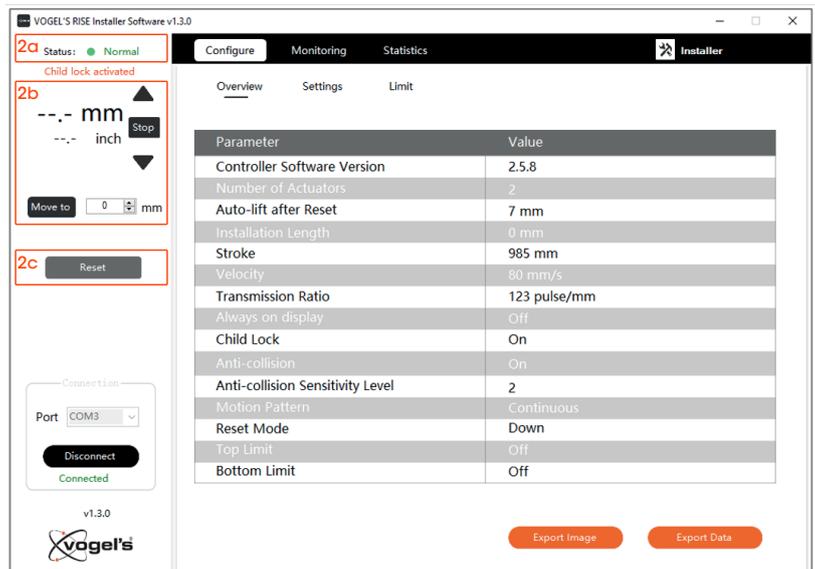

## 5. Configure - Overview


- 5a: Creates an overview of all settings
- 5b: Export Image:  
Creates a screenshot of the page
- 5c: Export data:  
Creates an overview of all the data in an '.ini' file

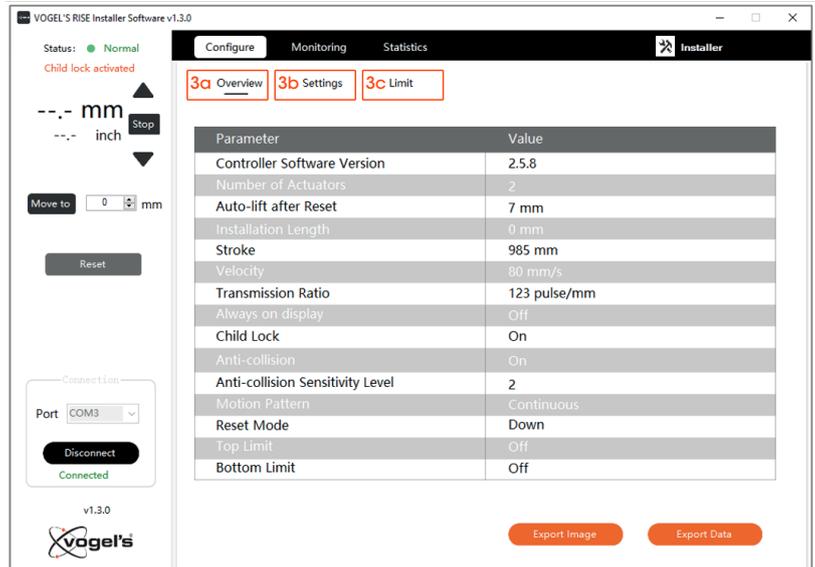

## 6. Configure - Settings


- 6a: Switching the child lock on/off:
  - Press the switch
  - Press Apply Parameters

*Import Parameters:  
Not accessible for Installer*

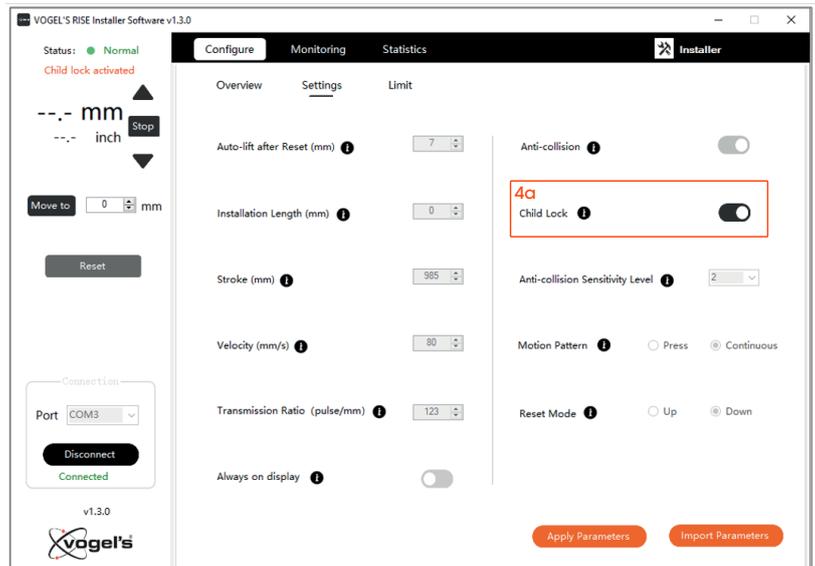


## 7. Configure - Limit

- 7a: Switch Top Limit and/or Bottom Limit on/off
- 7b: Set a limit
- 7c: Apply Parameters to change the settings

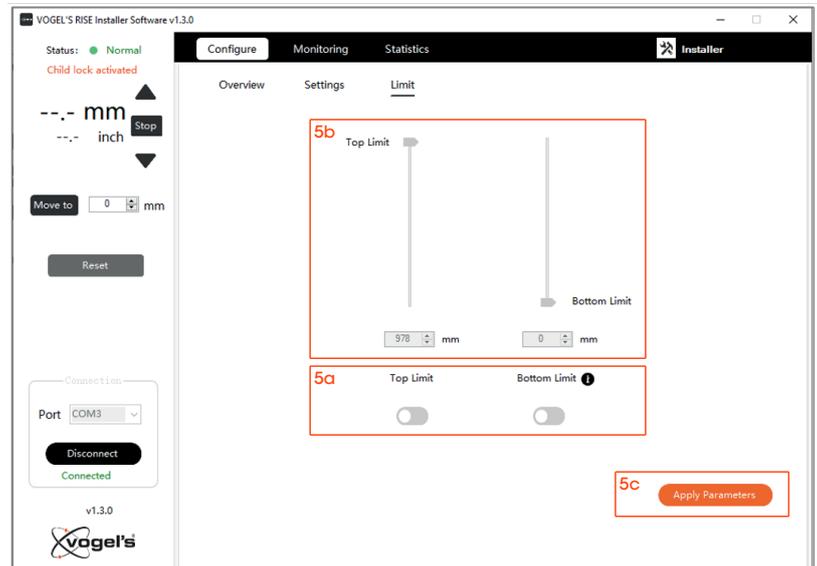


## 8. Monitoring graph

- 8a: Gives an overview of the current, voltage and the position (height) of the columns
- 8b: Clear Screen: Creates the graph blank
- 8c: Export Image: Creates a screen shot of the window
- 8d: Export Parameters: Gives all the x and y information of current, voltage and position

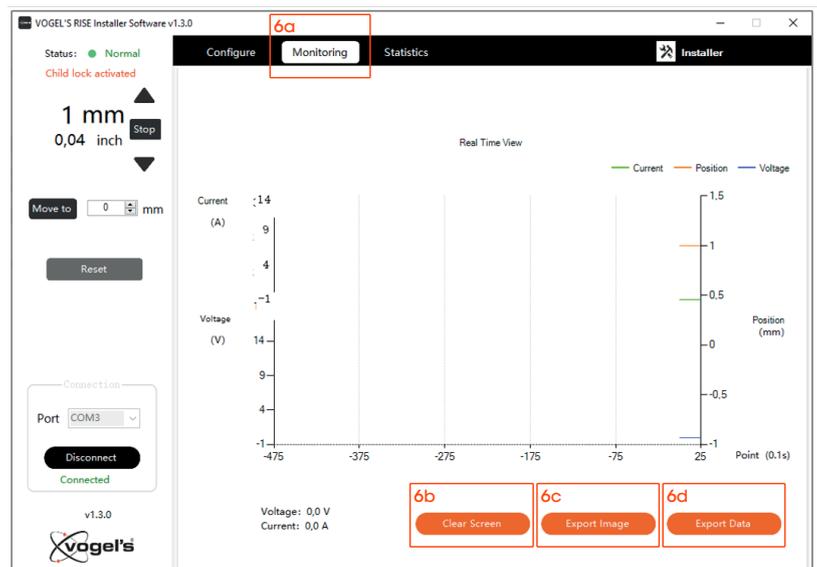


### 9. Statistics

- 9a: Run/Stop: Gives an overview of the travelled distance of the system's lifetime
- 9b: Error Reason: Gives an overview of the number of errors in the system's lifetime
- 9c: System Log: Gives an overview of the last 10 errors and/or anti-collisions

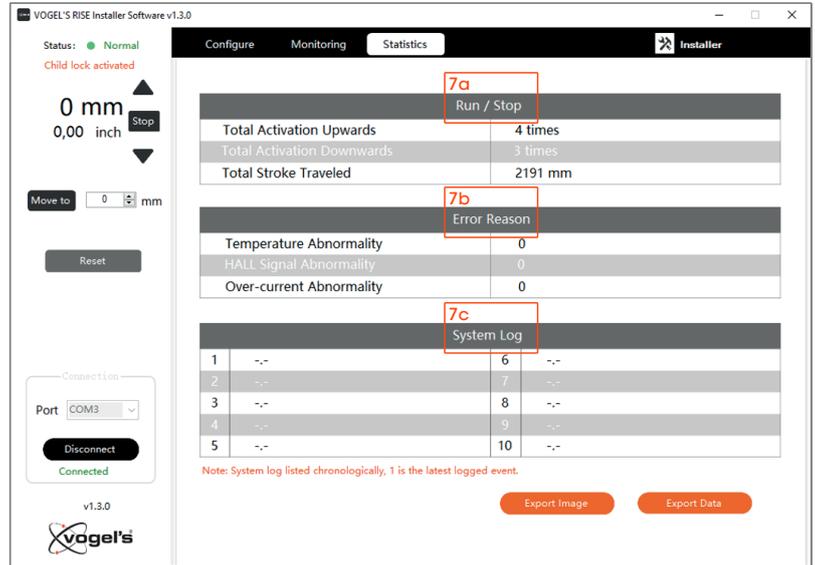

### 10. Connect/Disconnect

- 10a: Disconnect: disconnect system (might be useful in case the system is not working properly)

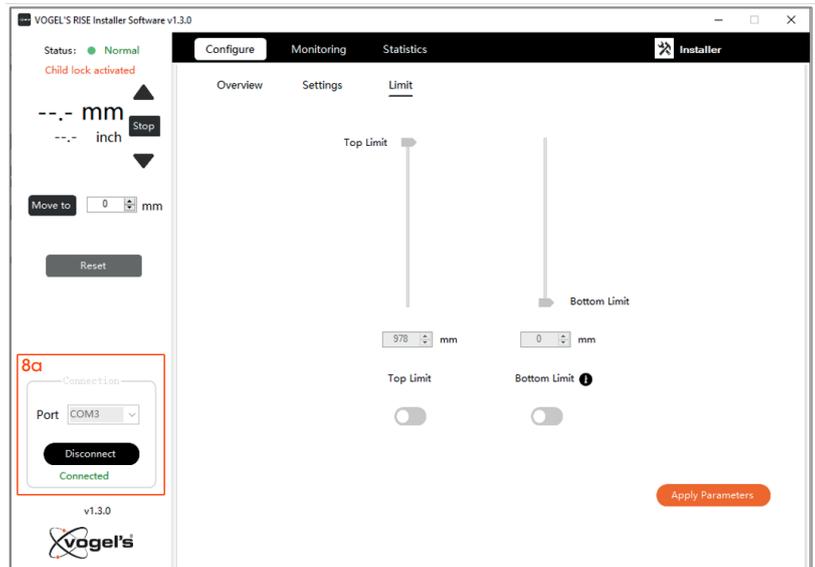

**Vogel's Products BV**

HONDSRUGLAAN 93,  
5628 DB EINDHOVEN,  
THE NETHERLANDS

T +31 (0)40 264 74 00

E [info@vogels.com](mailto:info@vogels.com)

W [www.vogels.com](http://www.vogels.com)

**Vogel's.** For Sure.