




Step 1

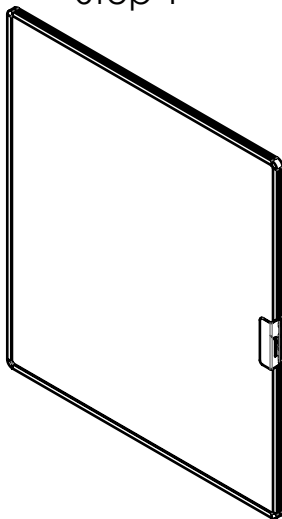

Push back the part as much as you can


Place left part on whiteboard edge on preferred height

Step 2

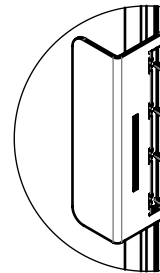


Use the screws supplied in bulk to fix the left part to the whiteboard

Step 3

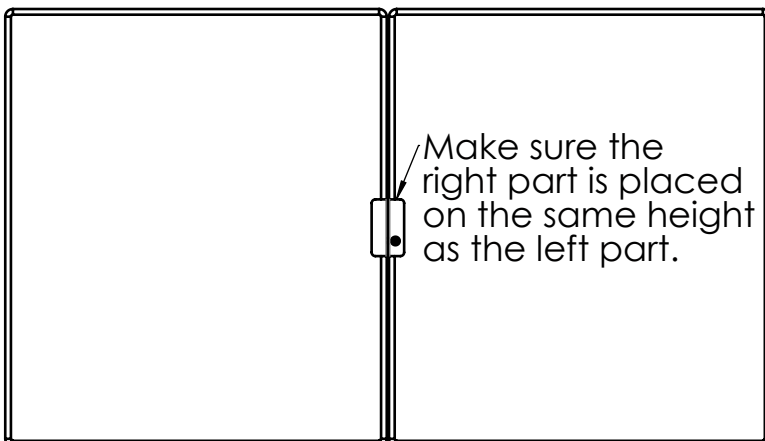

Make sure the right part is placed on the same height as the left part.

Step 4

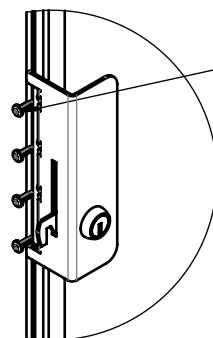

Push back the right part as much as possible like in step 1. Use the screw supplied in bulk to fix the part to the whiteboard.