


Wireless Model Connection Diagram

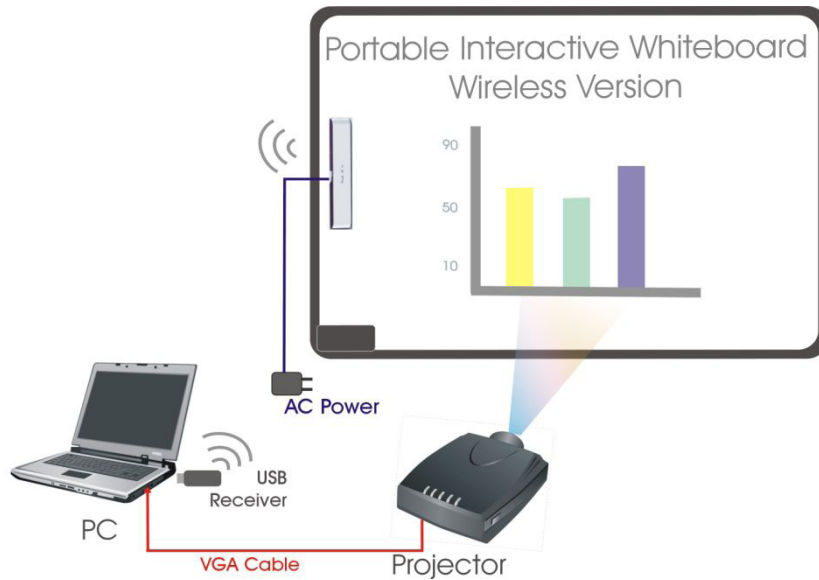

- Connect the Power Adaptor to the Portable IWB using the USB cable provided. Insert the plug of the Power Adaptor into the power outlet.
- Connect the USB Wireless Receiver to a PC / laptop.
- Connect the PC / laptop to a projector using a VGA cable.

Wireless Settings

Scan

- Click “Scan” to search the IWB available.

Pair

- Select the IWB Name and click “Pair” to make pairing for the Receiver and the Board.

Assign IWB Name

- It is recommended to rename the Sensor unit after pairing.

Select Channel

- 30 wireless channels are available for selection.
- Change the channel when the signal is weak.

Unpair

- Click “Unpair” to release the channel.

lock

- Click “Unpair” and re-do pairing if the Sensor unit or Wireless receiver has been changed.

