



Mobile Stand for IFP

Installation Manual

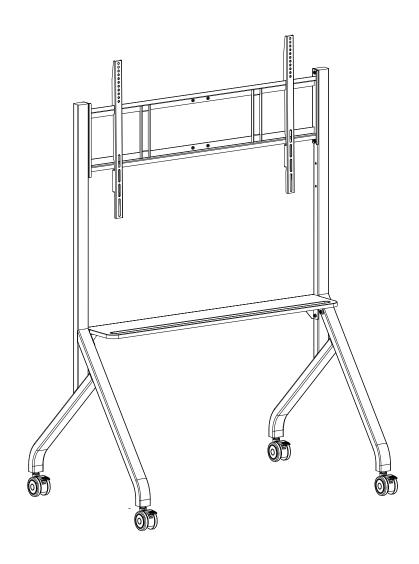

- To use the product safely and correctly, please read this manual carefully before installation.
- This product is suitable for 65-86 inch touch panel.
- The maximum capacity of this cart is 100 KG.

Main Parts:

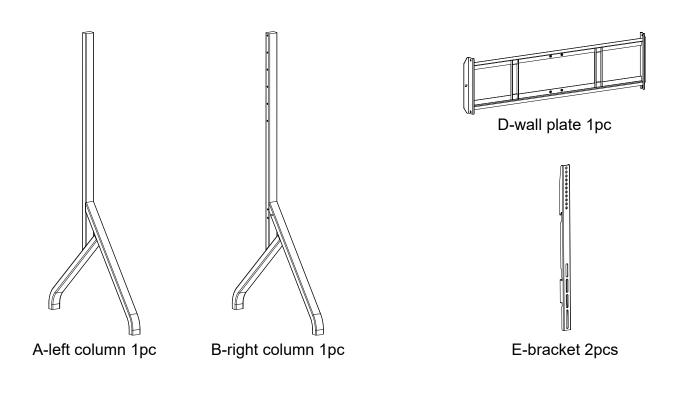







F-4 inch wheels 4pcs

Main Parts:


a-M8x20 Screw 12pcs	b-M6x16 Screw 4pcs	C-M8x25 Screw 4pcs	d-φ16x8.5x1.0 Washer 4pcs

e-φ24x12.5x1.5 Washer 4pcs	f-φ20x12.5x3.1 Spring washer	Cross screwdriver (Self provided)	Spannerg (Self provided)

1

Step 1:

Adjust the wheels to the braking state, and then screw the four wheels onto the left and right columns. (Figure 1)

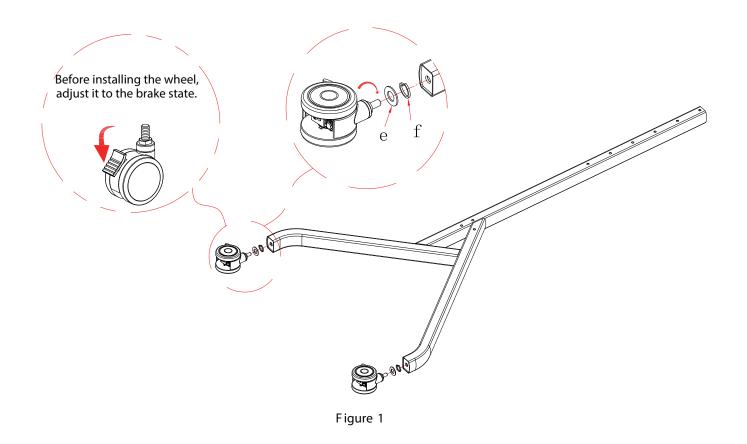

Step 2:

There are 3 combinations of installation holes in the wall plate. Choose the combination you need. Turn a screw (a) into the lower hole of the combination in advance. Do not lock it and reserve a distance of 8 mm. Then hang up the wall plate and lock all six screws (a).


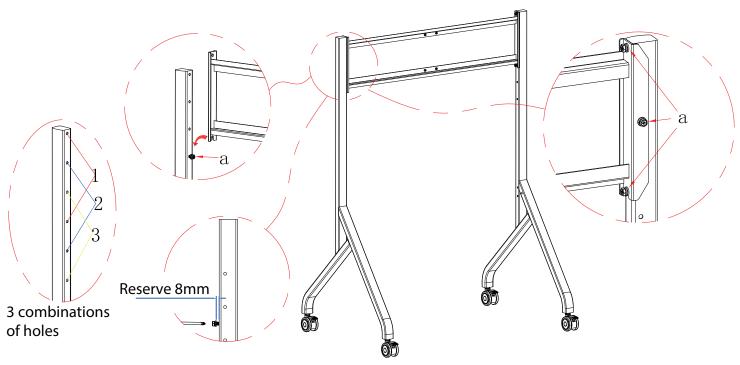


Figure 2


Step 3:

Turn a screw (a) into the hole as shown in Figure 3 in advance, do not lock and reserve a distance of 8 mm. Then hang up the tray and lock all six screws (a).

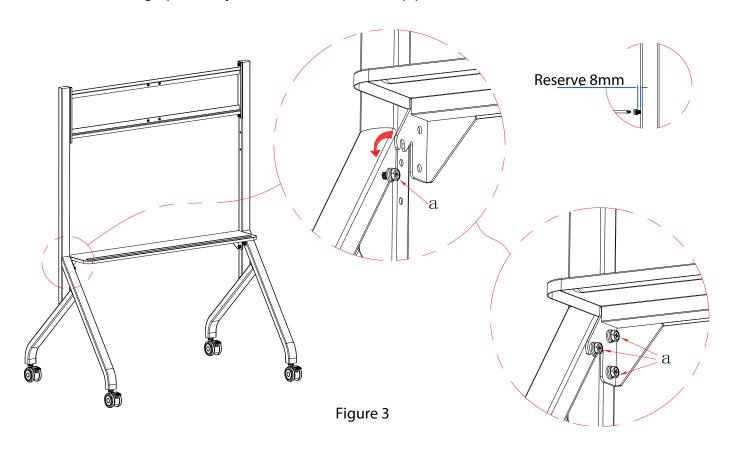

Step 4:


As shown in Figure 4, lay the touch panel flat, and select the appropriate screw to connect the bracket with the touch panel.

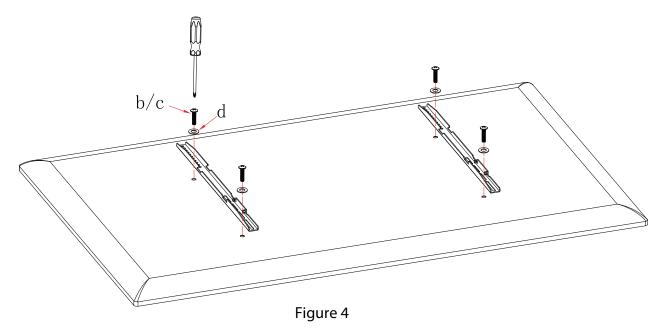

3


Step 5:

Install the touch panel with the bracket on the wall plate, ensure that the hook is hung on the border of the wall plate, and then lock the safety screw on the bracket.

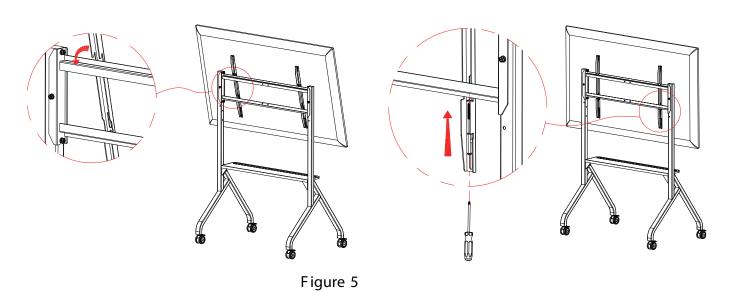

Step 6:

The final appearance of the touch panel and mobile stand after complete installation as follows:

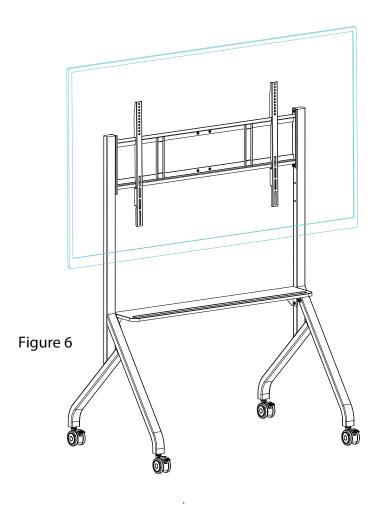

Contact your local distributor regarding warranty options in your territory.

You can find our standard warranty conditions on our website www.triumphboard.com/support/warranty

Fill in RMA or Product question here: www.triumphboard.com/support/technical-support/

If you have any questions, please email us at: **contact@triumphboard.com**

The content of this user manual is subject to change without prior notice.

Product: Mobile Stand for IFP

EAN:8592580121265

4